



1234 BELLEVUE STREET
GREEN BAY, WI 54302
Phone: 920-468-6828
Fax: 920-468-6967
info@biebelscatering.com
www.biebelscatering.com

SNO-CONE MACHINE (Model Paragon#6133110)

GENERAL INFORMATION & INSTRUCTIONS

ASSEMBLY:

1. Slide the drain hose over the outlet nipple located in the lower left side of the base.

ELECTRICAL REQUIREMENTS:

- The sno-cone machine requires a properly-grounded 120 volt supply with a 15 amp circuit.
- We recommend the sno-cone machine be plugged directly into a dedicated outlet. Extension cords are not recommended, however, if one is needed make sure at least #12 A.W.G. stranded wire is used. If the cord will be over 25 feet long, use #10 A.W.G. stranded wire.
- Be sure the outlet accepts 3-prong grounded plugs. DO NOT use a 3-prong to 2-prong adapter.

OPERATING INSTRUCTIONS:

**Connect to properly ground 120 V, 60 Hz power supply.

1. Turn on the "POWER" switch.
2. Lift the lid by the handle and fill the hopper with either cube or chunk ice (3 to 4 inch chunks).
3. Turn on the "MOTOR" switch.
4. Close the lid and apply pressure by using the handle.
5. Once all of the ice in the hopper has been shaved, turn off the "MOTOR" switch.
6. Scoop the shaved ice into the cone cups and add flavored syrup.

SAFETY RESET:

The snow-cone machine is equipped with a Safety Reset Circuit Breaker. This is designed to prevent damage to the machine in the event that the motor is overloaded due to excessive pressure. Should too much pressure be applied to the motor, the machine will shut down. In this event you should:

1. Turn the "MOTOR" switch off.
2. Press the reset button located between the two switches.
3. Turn the "MOTOR" switch back on.

The motor should begin to run again unless you have a blockage. If the motor does not run again:

1. Turn the "MOTOR" and "POWER" switches off.
2. Unplug the machine from the electrical outlet.
3. Open the lid and remove the blockage from the hopper.
4. Plug the machine back into the power source.
5. Press the reset button.
6. Turn on the "POWER" and "MOTOR" switches.

CLEANING:

1. Remove all ice from the shaver and the storage compartment.
2. Operate the motor for several minutes to remove any water collection on the cutter head.
3. Turn off the "POWER" and "MOTOR" switches.
4. Unplug the machine power from the electrical outlet.

5. Using a clean cloth, wipe down:
 - a. The inner surface of the shaver hopper (caution the cutting head has two exposed cutting blades)
 - b. The outside surface of the shaver casting and the plunger.
 - c. All interior and exterior surfaces.
6. To clean the water collection tray:
 - a. Tilt tray to drain the water trapped in the drain cavity.
 - b. Slip the drain hose off the nipple fitting.
 - c. Lift the tray out of the cabinet.

RETURNING:

Return the sno-cone machine by 12:00pm the next business day unless other arrangements have been made. When returning equipment to Biebel's, please check in at the deli counter before bringing in the equipment. The staff person will tell you what door or area to return the items to.